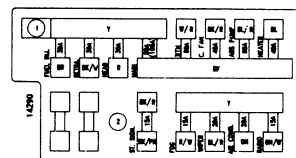
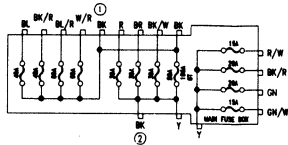


ENGINE COOLANT
TEMP. SENSOR

MAIN FUSE PANEL

 
A

TO 14289
ZONE 19ATO MAIN
FUSE PANEL

B

Y 30A FUEL INJ., 30 RETRA, 30 HEAD., 80A MAIN FUSES
 Y 15A FOG LAMPS, 20A WIPER, 20A A/C, 15A RADIO FUSES
 BK/R 30A FUEL INJ. FUSE
 BK/R 15A ST. SIGN (START SIGNAL) FUSE
 BK/R 20A WIPER FUSE
 R/W 15A FOG FUSE
 GN/W 15A RADIO FUSE
 BK/W 15A ST. SIGN (START SIGNAL) FUSE
 W/R 80A BTH FUSE
 BK/W 30A HEADLAMP FUSE
 GN 30A HEADLAMP RETRACTOR FUSE
 GN 20A A/C FUSE
 BK 40A HEATER FUSE
 BK 80A (100A GT) MAIN, 80A BTH, 40A COOLING FAN, 60A ABS PUMP, 40A HEATER FUSES
 BK/R 80A ABS PUMP FUSE
 BK/R 40A COOLING FAN FUSE

C

TO 10B942
ZONE 56-D

D

E

F

14289
C116

Y/GN

PULSE
GENERATOR14289
C114

R/B, Y, BL/R, BL/W

SOLENOID
VALVE14289
C115

BK

TRANS. FLUID
TEMP. SW.14289
C1002

R/W

HOOD LAMP

14289
C1003

GN/W

HOOD LAMP
SWITCH14289
C1020

R/B, BK, W/R

PRC/VAPS
TEST
CONNECTOR
(GT ONLY)14289
C1008

W/R, BL/W, W/R

L.F. ACTUATOR
(PRC)14289
C1011

W/R, BL/W, W/R

L.F. WHEEL SPEED
SENSOR (ABS)