




TO 13A709
ZONE 104-E

TO 14630
ZONE 103-A

TO JOINT
BOX
ZONE 80-B

TO JOINT
BOX
ZONE 79-B

   TO JOINT
BOX
ZONE 79-B



TO 14405
ZONE 101-F

TO CPU
(ON JOINT BOX)
ZONE 7B-A

TO 14405
ZONE 102-5

TO 14405
ZONE 117

TO 14631
ZONE 103-F

TO GROUND

3.0L : LX
CANADA